Information about software-updates

Only Update the Software – no new installation

- 1. You have loaded the three files by download to your computer. Copy this now in the root directory (ROOT) on a USB stick.
- 2. Start the instrument and wait until the instrument is ready for operation.
- **3.** Press the display button SETTINGS and on the bottom of the screen you will see the information of the currently installed software.



4. Now press the "Update software" button. A new information appears, that you need to connect the USB-Stick that contains the installation software to a USB port.

Insert data-medium!			
Insert the data-medium containing the software-update and press OK to continue!			
ок	Cancel		

- 5. Wait a few seconds that the system recognizes the USB flash drive and click **OK** to confirm. The music software is stopped and then the installer starts automatically.
- 6. Select the language und press WEITER/NEXT>

💿 WERSI Sonic Install - InstallAware Wiz	zard		
Bitte wählen Sie Ihre Sprache - Please select vour language.			
_	•	, , ,	
De	utsch	•	
Abbrechen/Cancel		Weiter/Next >	

8.

7. The following screen may not appear when your organ is already associated with the correct model. If the display appear, then select the existing instrument type.

ERSS by MUSIC STORE	50	OAX 500 - 600 - 700 - 800 - 1000
	OAX500 and OAX500UP	• OAX800
tribu	• OAX600	• OAX800UP
Dist	• OAX600LS	• OAX1000
	• OAX700	• OAX1000UP
	• OAX700LS	C/10100001
		< Back Cancel Next >
The installation program starts with the following screen:		
RSS MUSIC STORE	50	OAX 500 - 600 - 700 - 800 - 1000
	Current version 1.10-00	New version 1.20-04
	• Complete new installation The current software is deleted and completely re- (Presets, Styles, MIDI sequences) will be lost. Av	-installed. All own data ctivation keys retained.
Dis	 Update the existing software 	e
	There is an update of the software. Here, all your of (presets, Styles, MIDI sequences) and activation	data such as n keys remain.
	• Reset to factory settings All own data (Presets, Styles, MIDI sequences) v The software remains unchanged.	will be deleted.
		< Back Cancel Next >

- 9. In addition to the new version number, the version number of the currently installed software will be displayed under "Current version".
- 10. Choose between the following options:
 - a. **Complete New Installation** -> **ATTENTION!** Your own data will be completely erased! This is not recommended!
 - b. Update the existing software -> get your own data remain
- 11. In our example we select **Update the existing software**.
- 12. Now confirm by clicking **NEXT**.

13. An information text informed about your choices and their impact appears in the display.



- 14. Confirm with INSTALL or go BACK again to the selection page or quit with CANCEL.
- 15. If you select INSTALL, the new data will be copied to the hard drive and you see the message at the end:



16. Press **COMPLETE INSTALL** starts the software immediately.